

spare part list: GT474 Econom II for cattle



GT074040 BALL BEARING



GT367200 CUTTER HEAD  
HOUSING



GT367201 OSCILLATOR



GT367202 VIBRATORY SPRING  
BLADE



GT367203 SLEEVE



GT367205 REGULATING SCREW

spare part list: GT474 Econom II for cattle



GT367207 CYLINDER SCREW



GT367802 SPACER, LEFT



GT367803 SPACER, RIGHT



GT367812 SPUR GEAR



GT374208 CARBON BRUSH



GT374806 BRUSH HOLDER,  
MOUNTED

spare part list: GT474 Econom II for cattle



GT474242 SLIDING PIN



GT474243 MOTOR CAP



GT474205 DIAPHRAGM



GT474206 SLIDE KNOB



GT474210 NUT



GT474211 SAFETY UNIT PLUG  
SWITCH

 
spare part list: GT474 Econom II for cattle



GT474227 BEARING BUSH



GT474841 MOTOR HOUSING

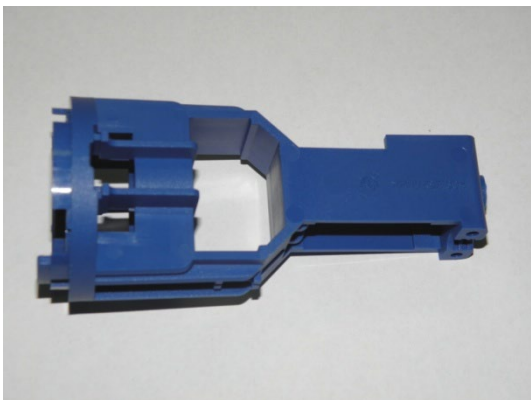

GT474842 STORAGE TRAY



GT474844 FILTER

 


GT474819 HARDCASE



GT474820 MAGNETIC FRAME,  
COMPLETE.

spare part list: GT474 Econom II for cattle

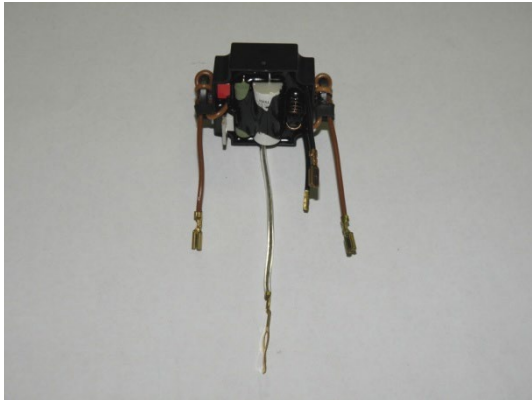

GT474830 PRINTED CIRCUIT BOARD 230V  
GT474832 PRINTED CIRCUIT BOARD 100/120V



 
GT474860 ROTOR 230 V  
GT474862 ROTOR 120V



GT494306 METALLIC SLEEVE



GT610010 SCREW FLAT HEAD DIN  
921

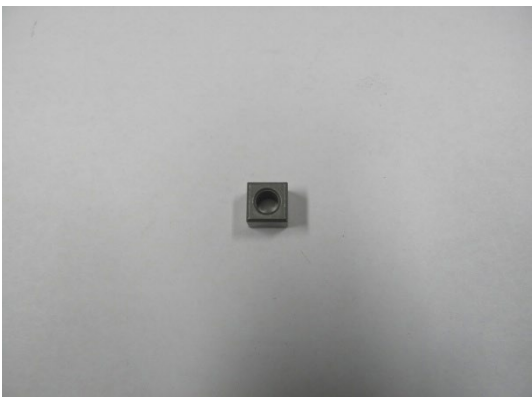

GT610304 ROCKER



GT610307 SPRING LINK

spare part list: GT474 Econom II for cattle



GT610405 NUT



TA003544 BALL BEARING DIN  
625 7X 19X 6



TA016336 screw M5 x 16 Tx 25



TA007765 COUNTERSUNK SCREW

 


TA007476 SCREW



TA010017 SCREW SELF CUTTING

spare part list: GT474 Econom II for cattle

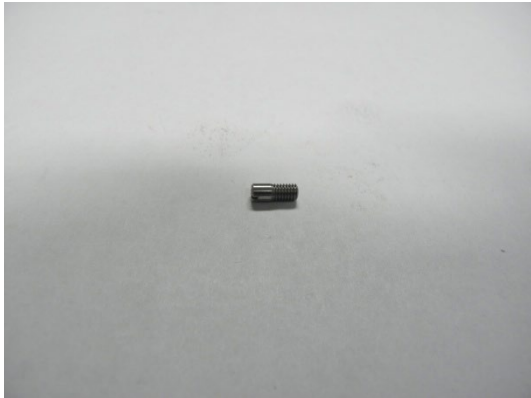

TA008295 SCREW SELF CUTTING



TA010349 SCREW SELF CUTTING



TA008530 CABLE CLAMP



TA008529 PROTECTIVE SLEEVE



TA010018 SAFETY DEVICE  
TA010235 SAFETY DEVICE (USA/  
CANADA/JAPAN)



MAINS CABLE WITH PLUG \*\*\*

spare part list: GT474 Econom II for cattle



TA007707 SLIDE SWITCH 230V  
TA005790 SLIDE SWITCH 100/120V



GT604 OILER PACKED

**MAINS CABLE WITH PLUG \*\*\***

GT474	– TA010197
GT474H	- TA013520
GT474K	– TA010201
GT474G	– TA010198
GT474J	– TA010200
GT474A	– TA012754
GT474AR	– TA012335